#### Installation Instruction

(Koleos 2016+)

#### **Precautions**

- All pictures in the manual are for reference only. Pictures and objects may differ, but the installation method is the same.
- In order to facilitate your installation, please carefully read the product manual before installation; When installing, protect your car's surface and avoid scratching.
- Please check regularly if all accessories connected with the car are loose to ensure safety.

### **Installation Steps**

Refer to the parts list and accessroy drawings to check if the accessories are complete. After the product is installed, press the tailgate button for 3-5 seconds. You will hear a sound "DI——" and then loose your hand. Press the tailgate button again and close it. You will hear two sounds. Tail gate learning is finished.



1.Remove the tailgate trim panel.



2.Remove the right lower bracket and the brace rod. Then install our right lower right bracket.



3.Install our brace rod with the right upper ball head of the original car.




4.Remove the left lower bracket and the brace rod. Then install our left lower right bracket.



5.Install our brace rod with the left upper ball head of the original car.



6.Brace rod installation completed diagram.

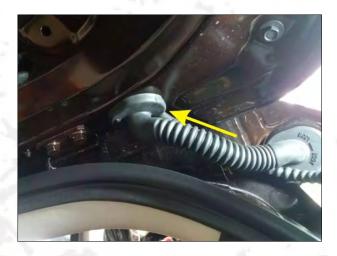

7. Pass the cables from the original car rubber plug (the left and right steps are the same).



8. Routing the cables through the rubber plug to the tailgate trim panel.




9.Remove the trim panel on the side of the main driver and fine the power supply.




10. Connect the ground wire.



11.Remove the rubber plug at the main driving belt B-pillar and find the central control cable,

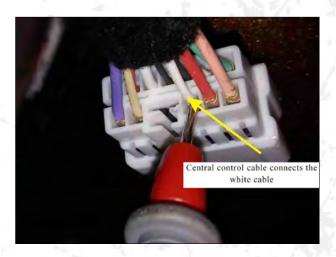

12. The central control cable is connected to the white cable (the third hole in the first row from left to right)

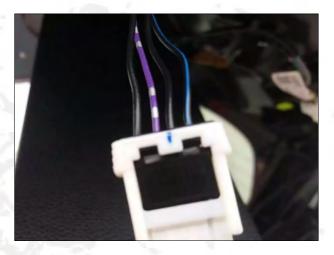

13.Insert this lock socket into our three-way adapter socket.



14.Install the central control box.





15. According to the color, insert the plug into the control box.



16.Drill a hole on the tailgate and install our tailgate switch button.



17.Remove the original car lock and instal our electric suction lock.



18.Install the motor next to the spare tire and fix it with our 3M paster.

After the installation is complete, you must set the tailgate learning. Make sure that the door can be opened and closed in place. (Raise the tailgate to ideal height. Then press the tailgate button for 3-5 seconds. You will hear a sound "DI——" and then loose your hand. Press the tailgate button again and close it. You will hear two sounds "DI DI". Tail gate learing is finished.) If you do not hear two sounds, learning is unsuccessful and you need to re-learn. If you can not close the door, use your hand to push the door to close when you are learning.

### Disclaimer

Due to improper installation and improper use, caused the relevant issues and losses, these not include within our company 's warranty. Thanks for your purchasing our products. Please read the manual carefully before use and collect it for later reference.

# **Key Control Method**

- 1. Press the original Key fobs three times to open and close the door.
- 2. Press the front switch button to open and close the door.

## Setting Height

- 1. Raise the tailgate to the ideal height;
- 2. Press the tailgate switch for 3-5s;
- 3. When you hear a long sound "Di——", loose your hand and press the tailgate switch again to close the door.
- 4. When you hear two sounds "Di Di", Setting height is finished.

Note: Do not close the door with your hands after setting the ideal height. Be sure to use our own tailgate switch.

### **Fault Solution**

The original key fob does not work	Check if the yellow central control line is
	connected.
	1. Check if the positive power supply is
Not working after installation	connected with 12V-16V.
	2.Check if the power fuse is inserted.
A N. Park	3. Check if the ground wire is connected.
1 - 1 - 2	1. Check if the left and right bracket are installed
	reversed.
Closing the tailgate not in place	2. Check if the control box wire is inserted.
89 4.	3. Check if the brackets are fixed with our
The tailgate can only open to half	screws.
1700 -	4. There are two rubbers on the left and right
	sides of the original tailgate cover. Check if
1. 6. 1	they are loose and need to be tightened.



All rights reserved.